







## DIY Air Cleaner

## **1x1** Building Instructions

## **Materials You Will Need**



1 20x20" Box Fan (Min. 75 Watts)



1 20x20" MERV 13 Filter (MPR 1900)



Duct Tape



Scissors Or Box Cutters



Pencil Or Pen




Ruler Or Measuring Tape

Note: Use a new, clean fan in good condition.

Take the fan out of its box.


Find the feet of the fan attached to the handle. Twist apart and forcefully slide into slots found on the bottom of the fan.

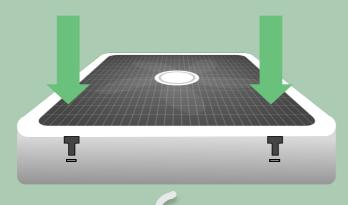




Lay the fan face down.

Duct tape the filter directly to the back of the fan. Seal all sides thoroughly to prevent gaps.

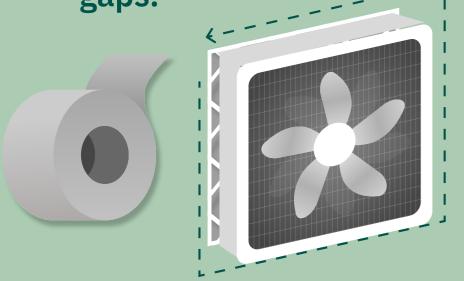

Find the directional arrow on the side of the filter. Place arrow facing the back of the fan.

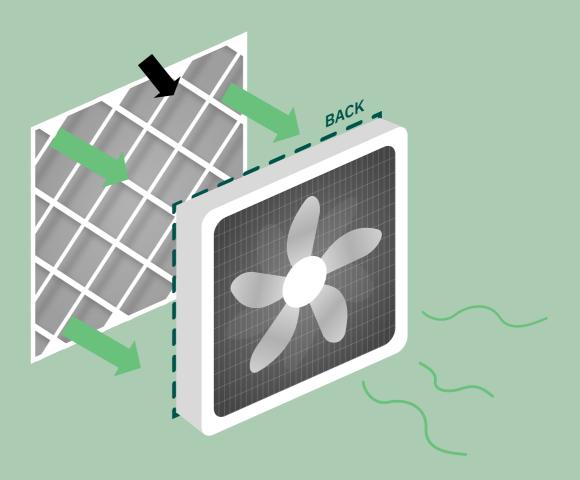



Tip: The front of the fan includes the logo


## Using Duct Tape To Make The Shroud


Lay the fan face up on your desk.


Tape around the front of the fan, creating a border. Measure 2.5" from the outer edge of the unit on each side. Multiple strips of tape will be needed.

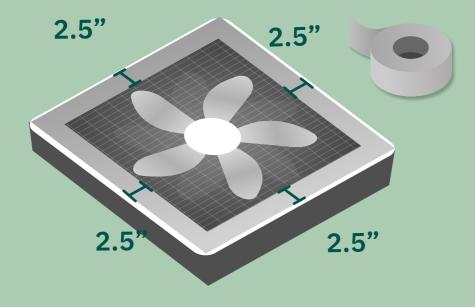

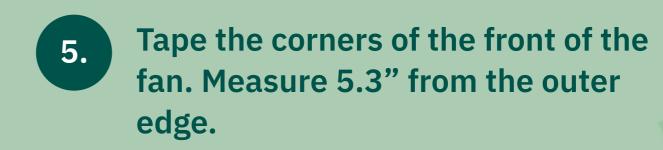

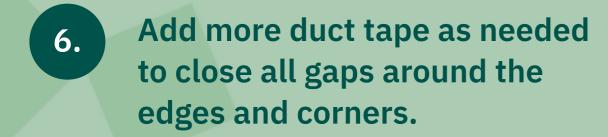

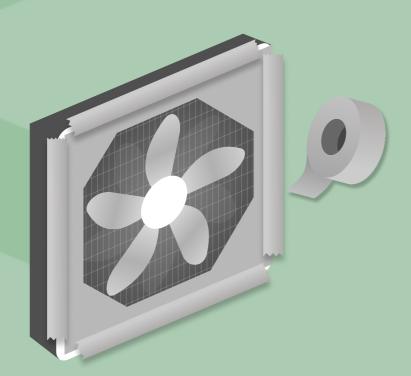

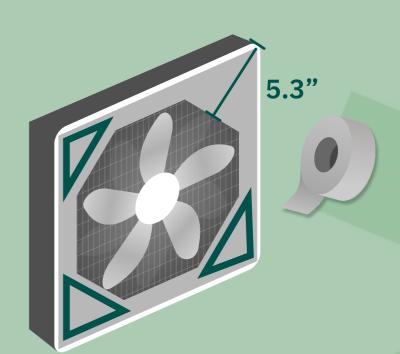

Personalize your air cleaner with stickers and decorative tape to make it uniquely yours.











